

## **DIMSD2 system variable**

1472 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 778

### **Function Description:**

The **DIMSD2** system variable is used to control whether to hide the second dimension line and arrowhead.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off

If this system variable set to on, it hides the extension line and arrowhead between the first extension line and text.

### **System Variable Value:**

**Off** : display the second dimension line

**On** : hide the second dimension line

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimsd2-system-variable-1472.html>