

## **DIMSE1 system variable**

1473 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 890

### **Function Description:**

The **DIMSE1** system variable is used to control whether to hide the first extension line.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off

### **System Variable Value:**

**Off** : display the extension line

**On** : hide the extension line

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimse1-system-variable-1473.html>