

DIMSE2 system variable

1474 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 963

Function Description:

The **DIMSE2** system variable is used to control whether to hide the second extension line.

Type : Parameter

Saved in : Drawing

Initial value : Off

System Variable Value:

Off : display the extension line

On : hide the extension line

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimse2-system-variable-1474.html>