

DIMSOXD system variable

1476 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 928

Function Description:

The **DIMSOXD** system variable is used to hide arrowheads when there is no sufficient space in extension line.

Type : Parameter

Saved in : Drawing

Initial value : Off

System Variable Value:

Off : display arrowhead

On : hide arrowhead

If there is no sufficient space in extension line and the DIMTIX is on, the setting of DIMSOXD is on without arrowhead. If DIMTIX has set to be off, the DIMSOXD is disabled.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimsoxd-system-variable-1476.html>