

DIMTDEC system variable

1478 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 944

Function Description:

The **DIMTDEC** system variable is used to set the number of decimal places displayed in tolerance values for primary units in a dimension.

Type : Integer

Saved in : Drawing

Initial value : 4(Imperial) or 2(Metric)

This system variable has no effect unless **DIMTOL** is set to On. The default for **DIMTOL** is Off.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtdec-system-variable-1478.html>