

## **DIMTDEC system variable**

1478 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 962

### **Function Description:**

The **DIMTDEC** system variable is used to set the number of decimal places displayed in tolerance values for primary units in a dimension.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 4(Imperial) or 2(Metric)

This system variable has no effect unless **DIMTOL** is set to On. The default for **DIMTOL** is Off.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtdec-system-variable-1478.html>