

DIMTFAC system variable

1479 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 971

Function Description:

The **DIMTFAC** system variable is used to set the scale factor for text height of fraction and tolerance relative to dimension text height. This has the same effect as settings of DIMTXT system variable.

Type : Real

Saved in : Drawing

Initial value : 1.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtfac-system-variable-1479.html>