

## **DIMTM system variable**

1480 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1041

### **Function Description:**

The **DIMTM** system variable is used to control the minimum tolerance limit for dimension text when the DIMTOL or DIMLIM is on.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

The **DIMTM** system variable could recognize a value with symbols. If the **DIMTOL** is on and the settings of **DIMTP** and **DIMTM** are the same, it could create a tolerance value.

If the values of **DIMTM** and **DIMTP** are different, the upper tolerance is drawn above the lower, and a plus sign is added to the **DIMTP** value if it is positive.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtm-system-variable-1480.html>