

## **DIMTSZ system variable**

1482 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1094

### **Function Description:**

The **DIMTSZ** system variable is used to specify the size of oblique strokes drawn instead of arrowheads for linear, radius, and diameter dimension.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

### **System Variable Value:**

**0** : draw arrowheads

**>0** : draw oblique strokes instead of arrowhead. The size of oblique strokes is control by **DIMTSZ** system variable multiplied by the value of **DIMSCALE** system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtsz-system-variable-1482.html>