

DIMTXSTY system variable

1484 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 950

Function Description:

The **DIMTXSTY** system variable is used to specify the dimension text styles.

Type : Strings

Saved in : Drawing

Initial value : Standard

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtxsty-system-variable-1484.html>