

## **DIMTXSTY system variable**

1484 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 938

### **Function Description:**

The **DIMTXSTY** system variable is used to specify the dimension text styles.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Standard

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtxsty-system-variable-1484.html>