

DIMTXT system variable

1485 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 930

Function Description:

The **DIMTXT** system variable is used to specify the height of dimension text (except for constant text height in current text styles)

Type : Real

Saved in : Drawing

Initial value : 0.1800(Imperial) or 2.5000 (Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtxt-system-variable-1485.html>