

DIMTXTDIRECTION system variable

1486 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 946

Function Description:

The **DIMTXTDIRECTION** system variable is used to specify the dimension text reading direction.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : display dimension text in left-to- right reading style

1 : display dimension text in right-to-left reading style

Online URL:

<https://www.gstarcad.com.my/knowledge/article/dimtxtdirection-system-variable-1486.html>