

## **DIMTXTDIRECTION system variable**

1486 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 944

### **Function Description:**

The **DIMTXTDIRECTION** system variable is used to specify the dimension text reading direction.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : display dimension text in left-to- right reading style

**1** : display dimension text in right-to-left reading style

Online URL:

<https://www.gstarcad.com.my/knowledge/article/dimtxtdirection-system-variable-1486.html>