

## **DIMTZIN system variable**

1487 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1002

### **Function Description:**

The **DIMTZIN** system variable is used to control the zero suppression for tolerance.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0 (Imperial) or 8 (Metric)

**Range** : 0 ~ 15

### **System Variable Value:**

**0** : suppress zero feet and zero inch

**1** : include zero feet and zero inch

**2** : include zero feet and suppress zero inch

**3** : include zero inch and suppress zero feet

**4** : suppress the leading zero in decimal dimension

**8** : suppress the trailing zero in decimal dimension

**12** : suppress the leading zero and trailing zero

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtzin-system-variable-1487.html>