

## **DIMUNIT system variable**

1488 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1225

### **Function Description:**

The **DIMUNIT** system variable is used to set the dimension format.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 2

**Range** : 1 ~ 8

### **System Variable Value:**

**1** : scientific

**2** : scientific

**3** : engineering

**4** : architectural -stack

**5** : fractional-stack

**6** : architectural

**7** : fractional

**8** : Microsoft Windows Desktop

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimunit-system-variable-1488.html>