

DIMUNIT system variable

1488 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1220

Function Description:

The **DIMUNIT** system variable is used to set the dimension format.

Type : Real

Saved in : Drawing

Initial value : 2

Range : 1 ~ 8

System Variable Value:

1 : scientific

2 : scientific

3 : engineering

4 : architectural -stack

5 : fractional-stack

6 : architectural

7 : fractional

8 : Microsoft Windows Desktop

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimunit-system-variable-1488.html>