

DISTANCE system variable

1492 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 910

Function Description:

The **DISTANCE** system variable is used to store the distance calculated by DIST command.
(Read-Only)

Type : Real

Saved in : Not saved

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/distance-system-variable-1492.html>