

## **DISTANCE system variable**

1492 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 922

### **Function Description:**

The **DISTANCE** system variable is used to store the distance calculated by DIST command.  
(Read-Only)

**Type** : Real

**Saved in** : Not saved

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/distance-system-variable-1492.html>