

DIVMESHBOXHEIGHT system variable

1493 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 956

Function Description:

The **DIVMESHBOXHEIGHT** system variable is used to set the number of subdivisions for the height of a mesh box along the Z axis.

Type : Integer

Saved in : User-settings

Initial value : 3

This setting could affect the new mesh box created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshboxheight-system-variable-1493.html>