

## **DIVMESHBOXHEIGHT system variable**

1493 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 947

### **Function Description:**

The **DIVMESHBOXHEIGHT** system variable is used to set the number of subdivisions for the height of a mesh box along the Z axis.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 3

This setting could affect the new mesh box created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshboxheight-system-variable-1493.html>