

DIVMESHBOXLENGTH system variable

1494 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 985

Function Description:

The **DIVMESHBOXLENGTH** system variable is used to set the number of subdivisions for the length of a mesh box along the X axis.

Type : Integer

Saved in : User-settings

Initial value : 3

This setting could affect the new mesh box created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshboxlength-system-variable-1494.html>