

## **DIVMESHBOXWIDTH system variable**

1495 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1011

### **Function Description:**

The **DIVMESHBOXWIDTH** system variable is used to set the number of subdivisions for the height of a mesh box along the Y axis.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 3

This setting could affect the new mesh box created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshboxwidth-system-variable-1495.html>