## **DIVMESHCONEAXIS** system variable

1496 GstarCAD MY /KW July 14, 2021 System Variables 0 649

## **Function Description:**

The **DIVMESHCONEAXIS** system variable is used to set the number of subdivisions for basal plane circumference of mesh cone.

Type: Parameter

Saved in: User-settings

Initial value: 8

This setting could affect the new mesh cone created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

## Online URL:

https://www.gstarcad.com.my/knowledge/article/divmeshconeaxis-system-variable-1496.html