

## **DIVMESHCONEXIS system variable**

1496 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 647

### **Function Description:**

The **DIVMESHCONEXIS** system variable is used to set the number of subdivisions for basal plane circumference of mesh cone.

Type : Parameter

Saved in : User-settings

Initial value : 8

This setting could affect the new mesh cone created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshconexis-system-variable-1496.html>