

DIVMESHCONEBASE system variable

1497 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1129

Function Description:

The **DIVMESHCONEBASE** system variable is used to set the number of subdivisions between the perimeter and the center point of mesh cone base.

Type : Parameter

Saved in : User-settings

Initial value : 3

This setting could affect the new mesh cone created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshconebase-system-variable-1497.html>