

## **DIVMESHPIYRBASE system variable**

1499 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1113

### **Function Description:**

The **DIVMESHPIYRBASE** system variable is used to set the number of subdivisions from the base center to its perimeter of mesh pyramid.

**Type :** Integer

**Saved in :** User-settings

**Initial value :** 3

This setting could affect the new mesh pyramid created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshpyrbase-system-variable-1499.html>