

## **DIVMESHPLYRLENGTH system variable**

1501 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 873

### **Function Description:**

The **DIVMESHPLYRLENGTH** system variable is used to set the number of subdivisions along each dimension of the base a mesh pyramid.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 3

This setting could affect the new mesh pyramid created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshpyrlength-system-variable-1501.html>