

## **DIVMESHCYLBASE system variable**

1503 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 996

### **Function Description:**

The **DIVMESHCYLBASE** system variable is used to set the number of subdivisions from the base center to its perimeter of mesh cylinder.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 3

This setting could affect the new mesh cylinder created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshcylbase-system-variable-1503.html>