

## **DIVMESHSPHEREAXIS system variable**

1504 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1154

### **Function Description:**

The **DIVMESHSPHEREAXIS** system variable is used to set the number of subdivisions around the axis endpoint of the mesh sphere.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 12

This setting could affect the new mesh sphere created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshsphereaxis-system-variable-1504.html>