

## **DIVMESHSPHEREHEIGHT system variable**

1505 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 893

### **Function Description:**

The **DIVMESHSPHEREHEIGHT** system variable is used to set the number of subdivisions between the two axis endpoints of mesh sphere.

Type : Integer

Saved in : User-settings

Initial value : 6

This setting could affect the new mesh sphere created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshsphereheight-system-variable-1505.html>