

DIVMESHTORUSSECTION system variable

1507 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1031

Function Description:

The **DIVMESHTORUSSECTION** system variable is used to set the number of subdivisions in the profile along the path swept the mesh torus.

Type : Integer

Saved in : User-settings

Initial value : 8

This setting could affect the new mesh torus created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshtorussection-system-variable-1507.html>