

## **DIVMESHTORUSSECTION system variable**

1507 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1041

### **Function Description:**

The **DIVMESHTORUSSECTION** system variable is used to set the number of subdivisions in the profile along the path swept the mesh torus.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 8

This setting could affect the new mesh torus created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshtorussection-system-variable-1507.html>