

## **DIVMESHWEDGEBASE system variable**

1508 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 824

### **Function Description:**

The **DIVMESHWEDGEBASE** system variable is used to set the number of subdivisions from the wedge perimeter middle point to triangle dimension.

**Type :** Integer

**Saved in :** User-settings

**Initial value :** 3

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshwedgebase-system-variable-1508.html>