

## **DIVMESHWEDGEHEIGHT system variable**

1509 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 868

### **Function Description:**

The **DIVMESHWEDGEHEIGHT** system variable is used to set the number of subdivisions for the height of a mesh wedge along the Z axis.

Type : Integer

Saved in : User-settings

Initial value : 3

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshwedgeheight-system-variable-1509.html>