

## **DIVMESHWEDGELENGTH system variable**

1510 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1036

### **Function Description:**

The **DIVMESHWEDGELENGTH** system variable is used to set the number of subdivisions along the length of mesh wedge in X axis.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 4

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshwedgelength-system-variable-1510.html>