

DIVMESHWEDGESLOPE system variable

1511 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 696

Function Description:

The **DIVMESHWEDGESLOPE** system variable is used to set the number of subdivisions along the slope between the wedge vertex to base edge.

Type : Integer

Saved in : User-settings

Initial value : 3

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshwedgeslope-system-variable-1511.html>