

## **DIVMESHWEDGEWIDTH system variable**

1512 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 803

### **Function Description:**

The **DIVMESHWEDGEWIDTH** system variable is used to set the number of subdivisions along the width of mesh wedge in Y axis.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 3

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box

Online URL:

<https://www.gstarcad.com.my/knowledge/article/divmeshwedgewidth-system-variable-1512.html>