

DRAGMODE system variable

1515 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 870

Function Description:

The **DRAGMODE** system variable is used to controls the display of objects being dragged.

Type : Integer

Saved in : Registry

Initial value : Auto

The **DRAGMODE** command has the same name as this system variable . Use the SETVAR command to access this system variable. If **DRAGMODE** is on, the outline of the object is displayed when you drag it to another position.

System Variable Value:

OFF : does not display an outline of the object as you drag it

ON : displays the outline of the object as you drag it only if you enter drag at the command prompt after selecting the object to drag

Auto : always displays an outline of the object as you drag it

Online URL: <https://www.gstarcad.com.my/knowledge/article/dragmode-system-variable-1515.html>