

## **DRAGVS system variable**

1518 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1105

### **Function Description:**

The **DRAGVS** system variable is used to set the display visual style when creating 3D solids, mesh metalfiles, extruded solids, surfaces, and meshes.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

Users could specify current visual style by inputting a period ".". The **DRAGVS** system variable could only set the visual style which stored in drawings.

The **DRAGVS** system variable will be disabled when the current visual style set to be 2D wireframe.

Users could not delete the visual style specified by **DRAGVS** system variable by **PURGE** command.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dragvs-system-variable-1518.html>