

DWFOSNAP system variable

1522 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1006

Function Description:

The **DWFOSNAP** system variable is used to control whether to active object snap mode for geometric drawing in attached DWF or DWFx reference underlay.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay

1 : disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay

Online URL: <https://www.gstarcad.com.my/knowledge/article/dwfosnap-system-variable-1522.html>