

## **DWGCODEPAGE system variable**

1524 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1015

### **Function Description:**

The **DWGCODEPAGE** system variable is used to store the same value as the **SYSCODEPAGE** system variable for compatibility.

(Read-Only)

**Type** : Strings

**Saved in** : Not saved

**Initial value** : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/dwgcodepage-system-variable-1524.html>