

## **DWGPREFIX system variable**

1526 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 933

### **Function Description:**

The **DWGPREFIX** system variable is used to store the drawing driver and folder prefix.  
(Ready-Only)

**Type** : Strings

**Saved in** : Not saved

**Initial value** : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/dwgprefix-system-variable-1526.html>