

DWGPREFIX system variable

1526 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 932

Function Description:

The **DWGPREFIX** system variable is used to store the drawing driver and folder prefix.
(Ready-Only)

Type : Strings

Saved in : Not saved

Initial value : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/dwgprefix-system-variable-1526.html>