

## **DWGTITLED system variable**

1527 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1038

### **Function Description:**

The **DWGTITLED** system variable is used to specify whether the current drawing is named or not.  
(Ready-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : the drawing has named

**1** : the drawing has not named

Online URL: <https://www.gstarcad.com.my/knowledge/article/dwgtitled-system-variable-1527.html>