

DXEVAL system variable

1528 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 720

Function Description:

The **DXEVAL** system variable is used to control when data extraction tables are compared against the data source. It may display update notification when the data is not current.

Type : Integer

Saved in : Drawing

Initial value : 12

Range : 0 ~ 511

System Variable Value:

0 : no notification

1 : open

2 : save

4 : print

8 : publish

16 : eTransmit/ Archive

32 : automatically update when saving

64 : automatically update when printing

128 : automatically update when printing

256 : automatically update when eTransmitting/ Archiving

Online URL: <https://www.gstarcad.com.my/knowledge/article/dxeval-system-variable-1528.html>