

## **DYNCONSTRAINTMODE system variable**

1529 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1038

### **Function Description:**

The **DYNCONSTRAINTMODE** system variable is used to display hide dimension constraint when selected constrained objects.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : keep constrain hidden when selected objects

**1** : display hidden constrain when constrain objects selected

Note: when hidden dynamic constraint, this system variable takes effect.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/dynconstraintmode-system-variable-1529.html>