

DYNDIGRIP system variable

1530 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1005

Function Description:

The **DYNDIGRIP** system variable is used to control which dynamic dimension displaying when stretching grips.

Type : Bitcode

Saved in : Registry

Initial value : 31

Range : 0 ~ 31

The **DYNDIVIS** system variable must be set to 2 to display all dynamic dimension.

System Variable Value:

0 : none

1 : resulting dimension

2 : length change dimension

4 : absolute angle dimension

8 : angle change dimension

16 : arc radius dimension

The **DYNMODE** system variable is used to turn on or off dynamic input.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dyndigrip-system-variable-1530.html>