

## **DYNMODE system variable**

1532 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1323

### **Function Description:**

The **DYNMODE** system variable is used to turn on or off the dynamic input mode.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 3

**Range** : 0,1,2,3

If specifying a negative value to **DYNMODE** system variable, it turns off the dynamic input but stores its settings.

### **System Variable Value:**

**0** : turn off all dynamic input including dynamic prompts

**1** : pointer input on

**2** : dimensional input on

**3** : both pointer input and dimensional input on

If specified **DYNPROMPT** to be 1, it displays dynamic prompts when setting **DYNMODE** to be 1,2, or 3.

If specified **DYNMODE** to be 2 or 3, it switches to pointer input when inputting comma, angle bracket (>) or selecting multiple grips.

If specified **DYNMODE** to be 1,2, or 3, it temporarily closes all functions instead of F12.

Users could set dynamic input option in drafting settings dialog box

Online URL: <https://www.gstarcad.com.my/knowledge/article/dynmode-system-variable-1532.html>