

DYNMODE system variable

1532 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1298

Function Description:

The **DYNMODE** system variable is used to turn on or off the dynamic input mode.

Type : Integer

Saved in : Registry

Initial value : 3

Range : 0,1,2,3

If specifying a negative value to **DYNMODE** system variable, it turns off the dynamic input but stores its settings.

System Variable Value:

0 : turn off all dynamic input including dynamic prompts

1 : pointer input on

2 : dimensional input on

3 : both pointer input and dimensional input on

If specified **DYNPROMPT** to be 1, it displays dynamic prompts when setting **DYNMODE** to be 1,2, or 3.

If specified **DYNMODE** to be 2 or 3, it switches to pointer input when inputting comma, angle bracket (>) or selecting multiple grips.

If specified **DYNMODE** to be 1,2, or 3, it temporarily closes all functions instead of F12.

Users could set dynamic input option in drafting settings dialog box

Online URL: <https://www.gstarcad.com.my/knowledge/article/dynmode-system-variable-1532.html>